


3D Bonnit Brush System Parts

1-3D Universal Pad & Brush Driver

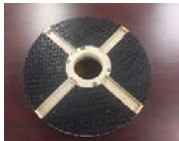

1-Clutch Plate



1-Riser with 4 Riser Bolts



8-Brush Mounting Screws



4-Quad Slotted Bonnits per Box



4 -.022gg Memory Nylon Brushes




Assembly Instructions:

- 1). Remove the 4 riser Bolts and align clutch plate to riser and screw down locking Clutch Plate to Riser and 3D Universal Pad & Brush Driver



- 2). Lay Carpet Brush Segment into molded area aligning holes and screw Brush Mounting Screws to Toggle bolts inside of 3D Universal Pad & Brush Driver and repeat locking all 4 brush inserts to 3D Universal Pad & Brush Driver

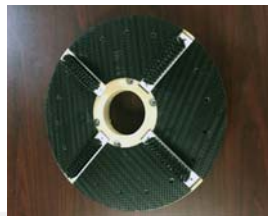

- 3). Place Bonnit onto 3D Universal Pad & Brush Holder allowing bristles to protrude through pads



- 4). As brushes take a set, reverse them and/or put them in a bucket of hot water and they will straighten up

Tips

- Reverse brush inserts around occasionally to maximize effectiveness
- Clean brush inserts with hot water and comb bristles with a fork to remove dirt
- Order an extra set of brush inserts as they are a wear item to maximize the effectiveness Part# NB-022-17
- Tell your friends and colleagues about this amazing 3D Carpet Cleaning Tool
- Looking for a stripping or scrubbing system for hard surfaces? Try our 3D Stripping System Part# BL-050-17 or 3D Scrubbing System Part# BL-035-17

The synergy of combining pads and brushes creates the ultimate 3D floor care!